



**AUTEXIER**

**MANUFACTURER OF INDUSTRIAL MARINE AND OIL & GAS VALVES  
IN BRONZE AND ALUMINIUM-BRONZE**

93, rue Louis Blanc - 02300 CHAUNY - FRANCE  
Tel : +33 (0)3.23.52.02.86 - Fax : +33 (0)3.23.39.52.28  
[www.autexier.fr](http://www.autexier.fr)

## Instruction for use for reflex glass indicator




**162**

### Operation

The role of the reflex glass indicator is to show the height of fluid remaining in capacity or circuit. The fluid flows in the *upper box 58* under the *refractive glass 53*. This *refractive glass 53* is maintained by the *lower box 59* and is sealed by the *seals 45*.

Ref. 162

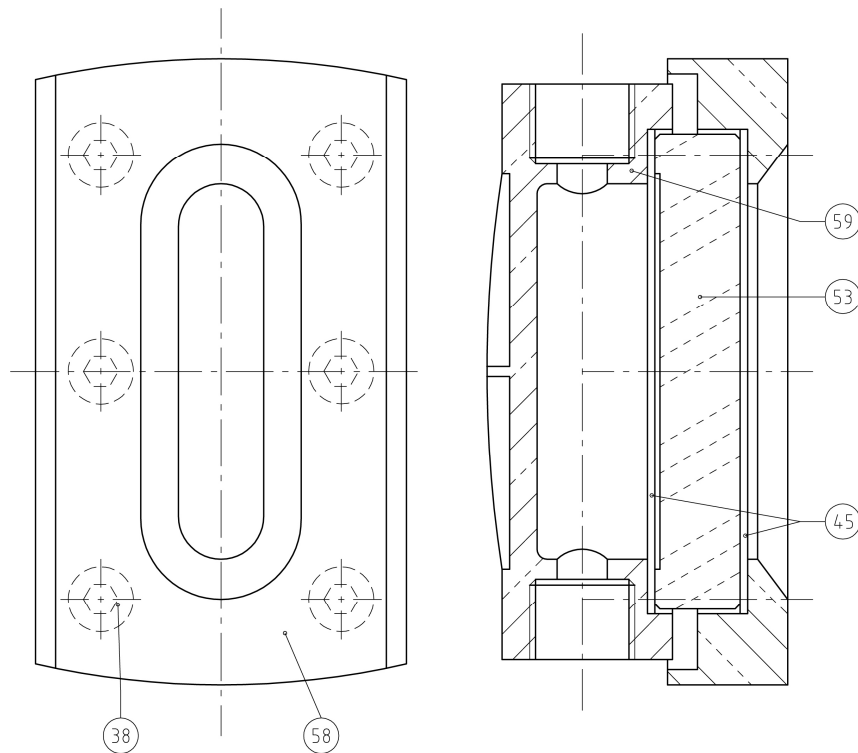

Ref. Document 0904DA145E version00 of 09 March 2015

