



AUTEXIER

MANUFACTURER OF INDUSTRIAL MARINE AND OIL & GAS VALVES
IN BRONZE AND ALUMINIUM-BRONZE

93, rue Louis Blanc - 02300 CHAUNY - FRANCE

Tel : +33 (0)3.23.52.02.86 - Fax : +33 (0)3.23.39.52.28

www.autexier.fr

Instruction for use for globe valves with lever



1097 / 2097

Operation



This globe valve opens by pressing the *lever 20*. To close this tap, it suffices to release the *lever 20*, in order to press the *disc 4* against the *body 1* thanks to the *spring 23*.

It is necessary to respect the fluid flow direction represented by the arrow engraved on the *body 1*.


DN08 to DN20

Ref. 1097TØ / 2097BØ

DN25

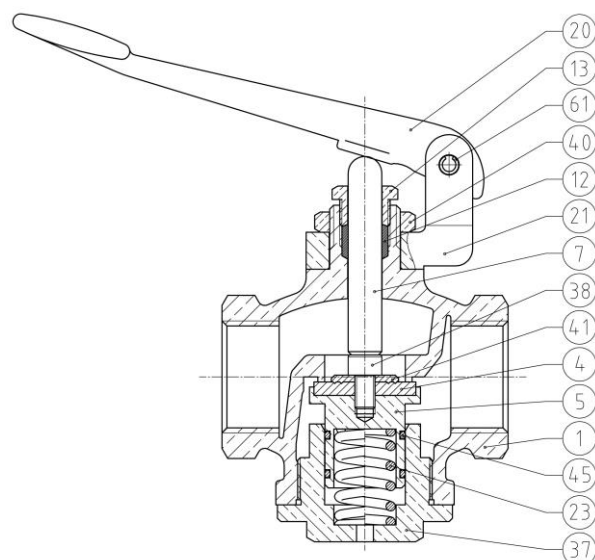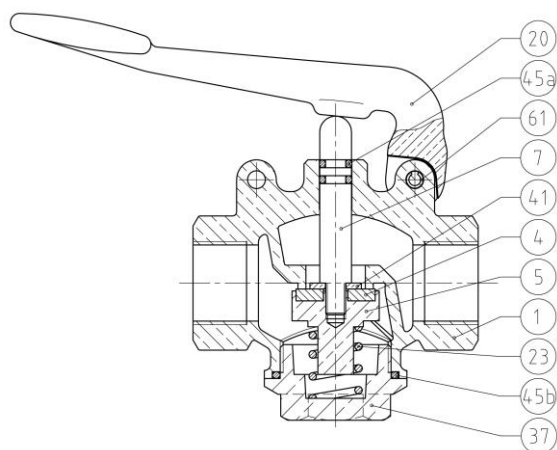

Ref. 1097TØM / 2097BØM
DN08 to DN20

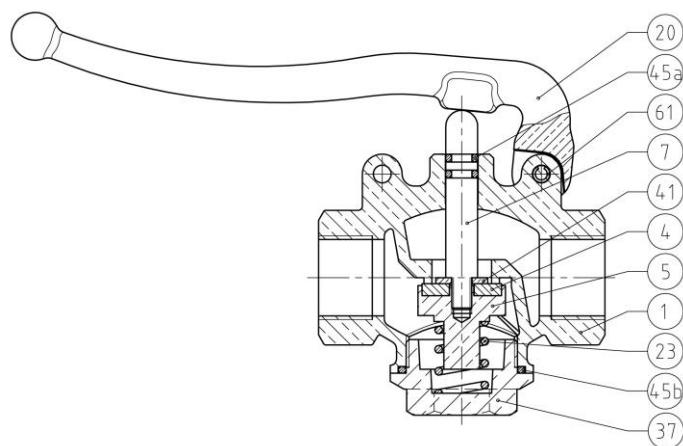

Ref. Document 0904DA103E version 00 of 18 Oct. 2022

