



AUTEXIER

**MANUFACTURER OF INDUSTRIAL, MARINE AND OIL & GAS VALVES
IN BRONZE AND ALUMINIUM-BRONZE**

93, rue Louis Blanc - 02300 CHAUNY - FRANCE
Tel : +33 (0)3.23.52.02.86 - Fax : +33 (0)3.23.39.52.28
www.autexier.fr

Instruction for use for fire hydrants




**A3198, AU3198 and AN3198 / A3199, AU3199 and AN3199 / A3202, AU3202 and AN3202
A3298, AU3298 and AN3298 / A3299, AU3299 and AN3299**


Operation

These fire hydrants open and shut by turning the wheel **8**. This rotation lifts or lowers the *disk* **4** thanks to a spiral link (screw/nut connections) between the *stem* **7** and the *bonnet* **2**. Please respect the direction of the fluid indicated by the arrow.


Ref. A3198 / AU3198 / AN3198

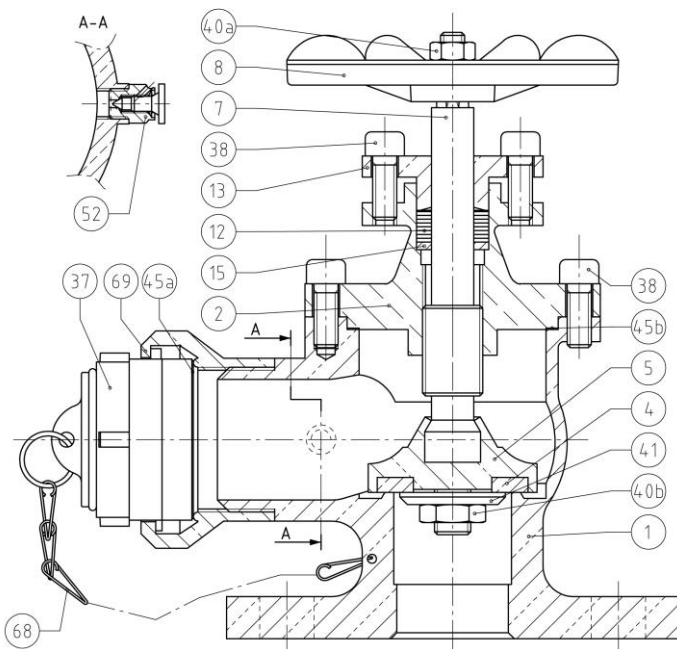


Ref. A3199 / AU3199 / AN3199

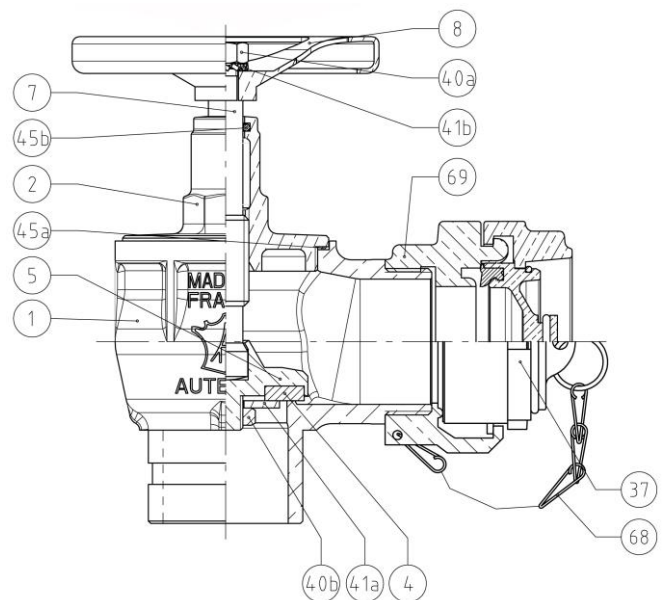

Ref. A3202 / AU3202 / AN3202

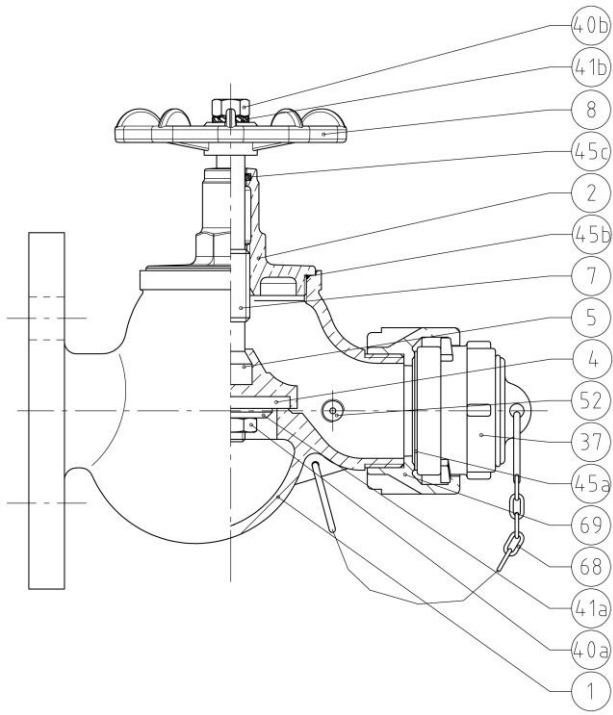

Ref. A3299 / AU3299 / AN3299

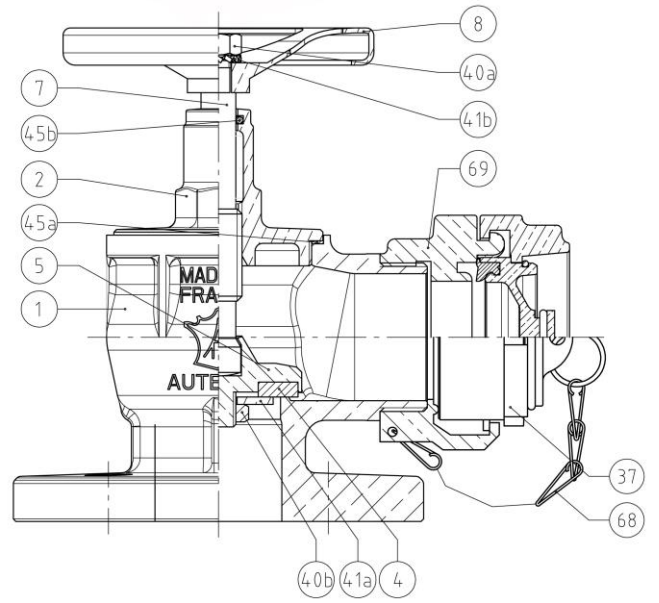

Ref. A3298 / AU3298 / AN3298

