

MANFACTURER OF INDUSTRIAL MARINE AND OIL & GAS VALVES IN BRONZE AND ALUMINIUM-BRONZE

93, rue Louis Blanc - 02300 CHAUNY - FRANCE Tel: +33 (0)3.23.52.02.86 - Fax: +33 (0)3.23.39.52.28

www.autexier.fr

Instruction for use for butterfly valves




A601, AU601, A602 and AU602


Operation

This butterfly valve opens and shuts by turning the *handle* **19** or the *handwheel* **101** of *gearbox* **100**, with several adjustable positions, up to a quarter turn. It can also be controlled by an *actuator* **100**. Indeed, this movement causes rotation of the *disc* (*butterfly*) **3**, via the *stem* **7**, perpendicularly to the direction of the fluid flow.


Ref. A601 / AU601

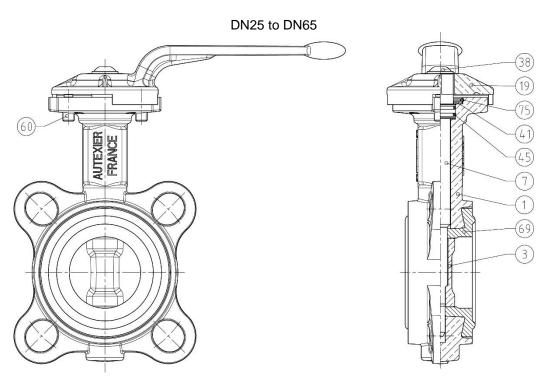



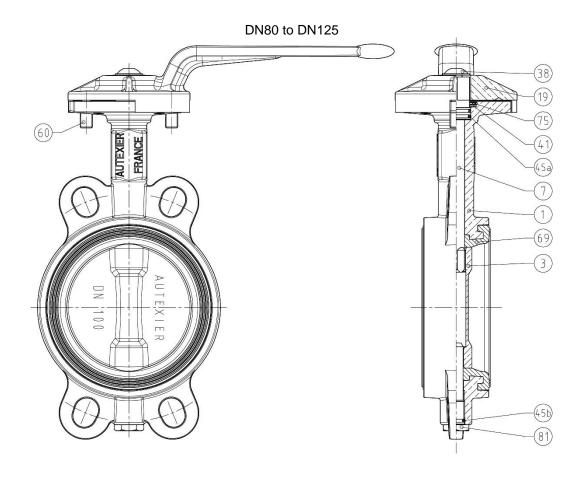


Ref. A601M / AU601M

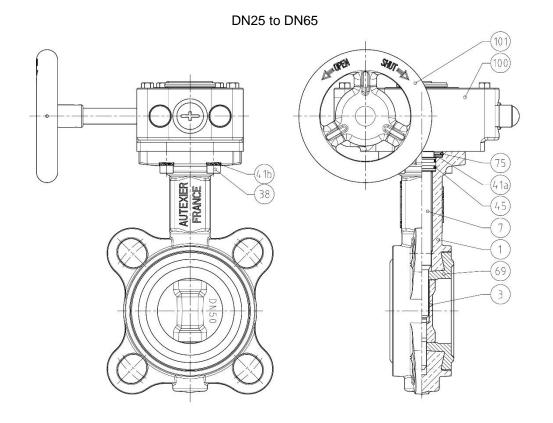




DN80 to DN300

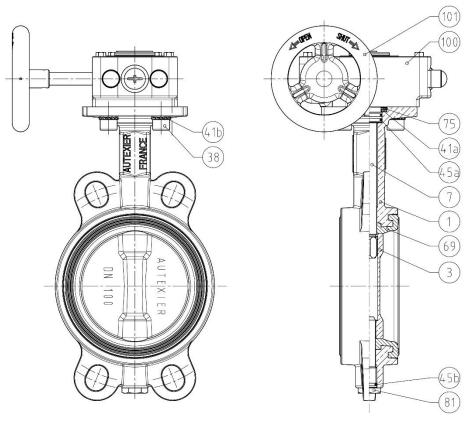


Ref. A601ME / AU601ME

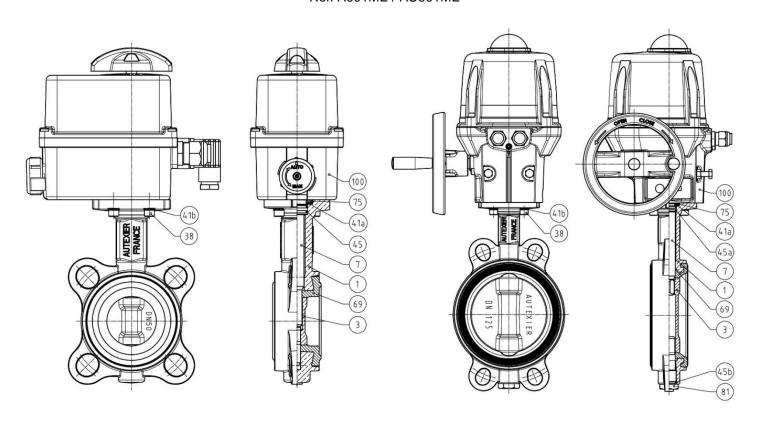




Ref. A602 / AU602



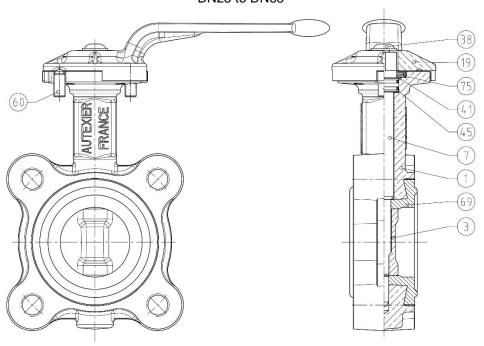


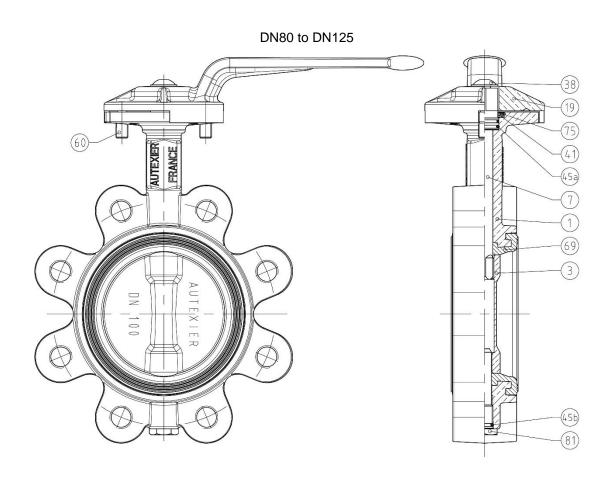




Ref. A602M / AU602M


DN25 to DN65

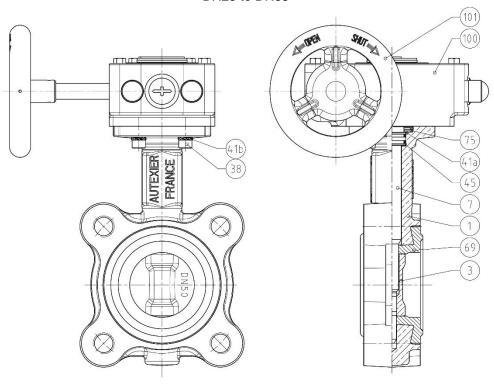

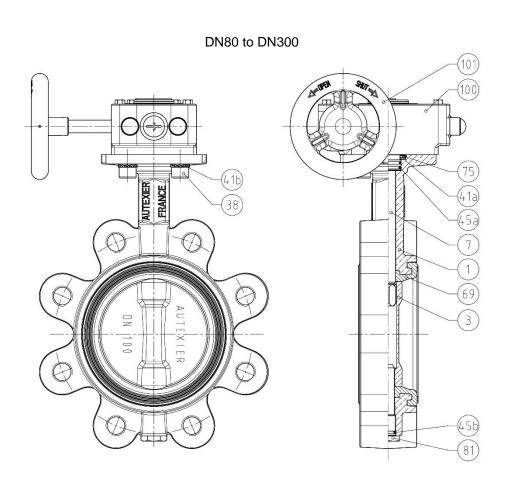



Ref. A602ME / AU602ME

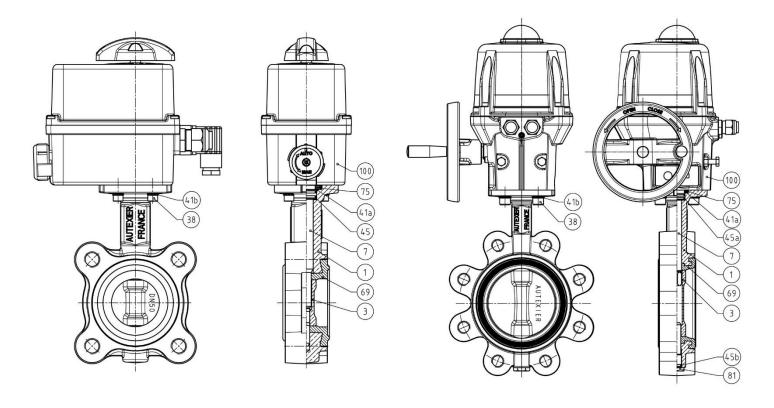

Ref. Document 0904DA114E version 04 of 21 January 2025

