



**AUTEXIER**

**MANUFACTURER OF INDUSTRIAL, MARINE AND OIL & GAS VALVES  
IN BRONZE AND ALUMINIUM-BRONZE**

93, rue Louis Blanc - 02300 CHAUNY - FRANCE  
Tel: +33 (0)3.23.52.02.86 - Fax: +33 (0)3.23.39.52.28  
[www.autexier.fr](http://www.autexier.fr)

## Instruction for use for fire hydrants





**A3198, AU3198, A3199, AU3199, A3202, AU3202, A3298, AU3298, A3299 and AU3299**

### Operation


These fire hydrants open and shut by turning the wheel **8**. This rotation lifts or lowers the *disk* **4** thanks to a spiral link (screw/nut connections) between the *stem* **7** and the *bonnet* **2**. Please respect the direction of the fluid indicated by the arrow.

Ref. A3198 / AU3198


Ref. A3199 / AU3199

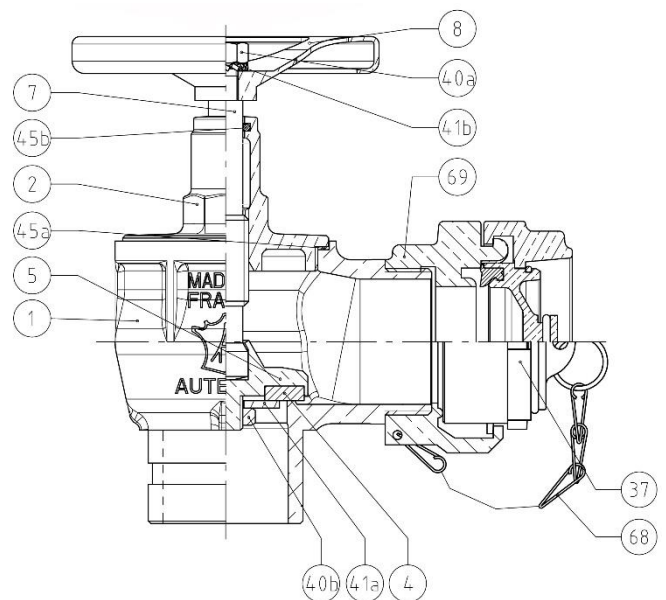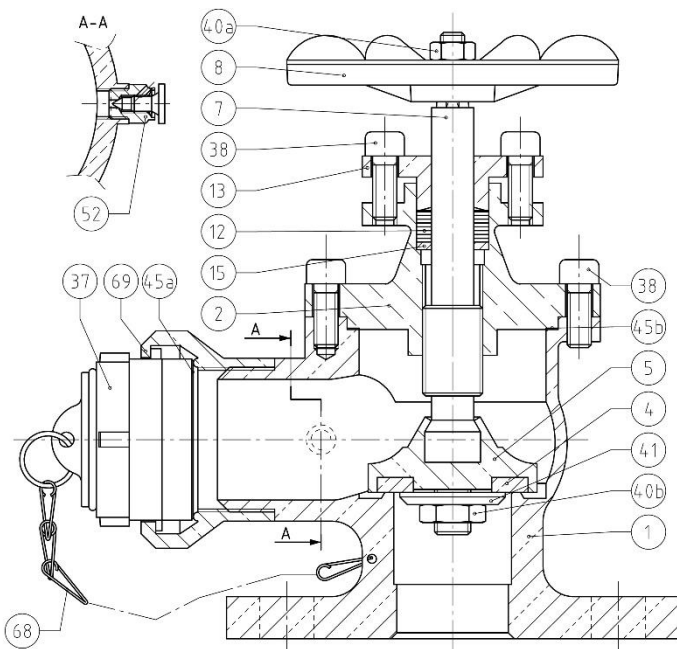

Ref. A3202 / AU3202

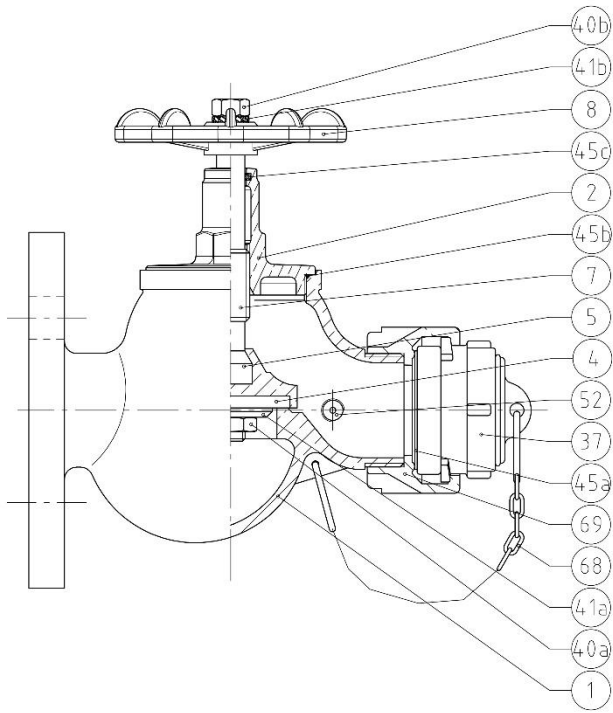

Réf. A3299 / AU3299

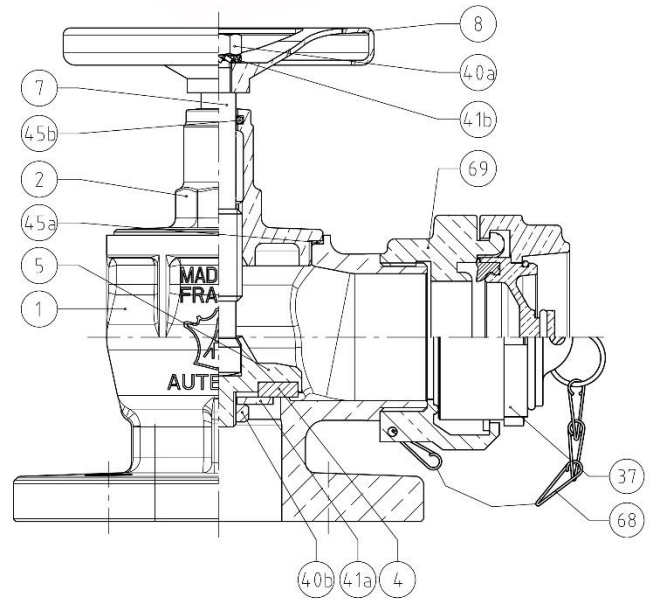

Ref. A3298 / AU3298

