

MANFACTURER OF INDUSTRIAL MARINE AND OIL & GAS VALVES IN BRONZE AND ALUMINIUM-BRONZE

93, rue Louis Blanc - 02300 CHAUNY - FRANCE Tel: +33 (0)3.23.52.02.86 - Fax: +33 (0)3.23.39.52.28

www.autexier.fr

Instruction for use for ball valves




A68 and AU68

Operation

It operates manually using the *handle* **19**. If the *handle* **19** is in the axis of the piping, the valve is opened. And if the handle is at 90° to axis of pipping, the valve is closed.

Ref. A68 / AU68

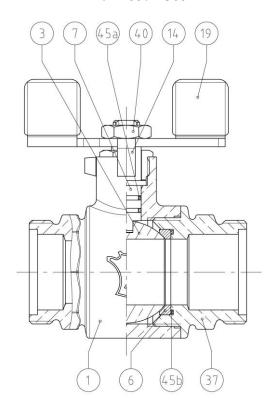

Ref. Document 0904DA172E version 01 of 06 February 2025

