



AUTEXIER

**MANUFACTURER OF INDUSTRIAL MARINE AND OIL & GAS VALVES
IN BRONZE AND ALUMINIUM-BRONZE**

93, rue Louis Blanc - 02300 CHAUNY - FRANCE

Tel: +33 (0)3.23.52.02.86 - Fax: +33 (0)3.23.39.52.28

www.autexier.fr

Instruction for use for Y strainers




116, AU116, 118 and AU118

Operation

When the fluid flows in the direction of the arrow on the *body 1* and first reaches the inner surface of the *sieve 72*. Fluid is thus free from the impurities, passes through the *sieve 72* and the particles are collected in the basket. These are easily removed by removing the *cover 2* or the *plug 37*.

Ref. 116 / AU116

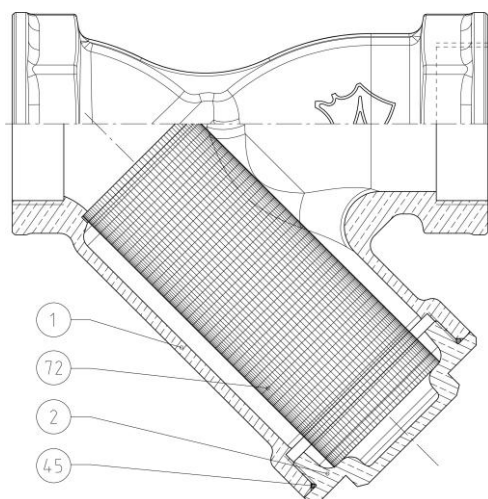

Ref. 118 / AU118

