



AUTEXIER

MANUFACTURER OF INDUSTRIAL MARINE AND OIL & GAS VALVES

IN BRONZE AND ALUMINIUM-BRONZE

93, rue Louis Blanc - 02300 CHAUNY - FRANCE

Tel: +33 (0)3.23.52.02.86 - Fax: +33 (0)3.23.39.52.28

www.autexier.fr

Instruction for use for reflex glass indicators




162

Operation

The role of the reflex glass indicator is to show the height of fluid remaining in capacity or circuit. The fluid flows in the *upper box 58* under the *refractive glass 53*. This *refractive glass 53* is maintained by the *lower box 59* and is sealed by the *seals 45*.

Ref. 162

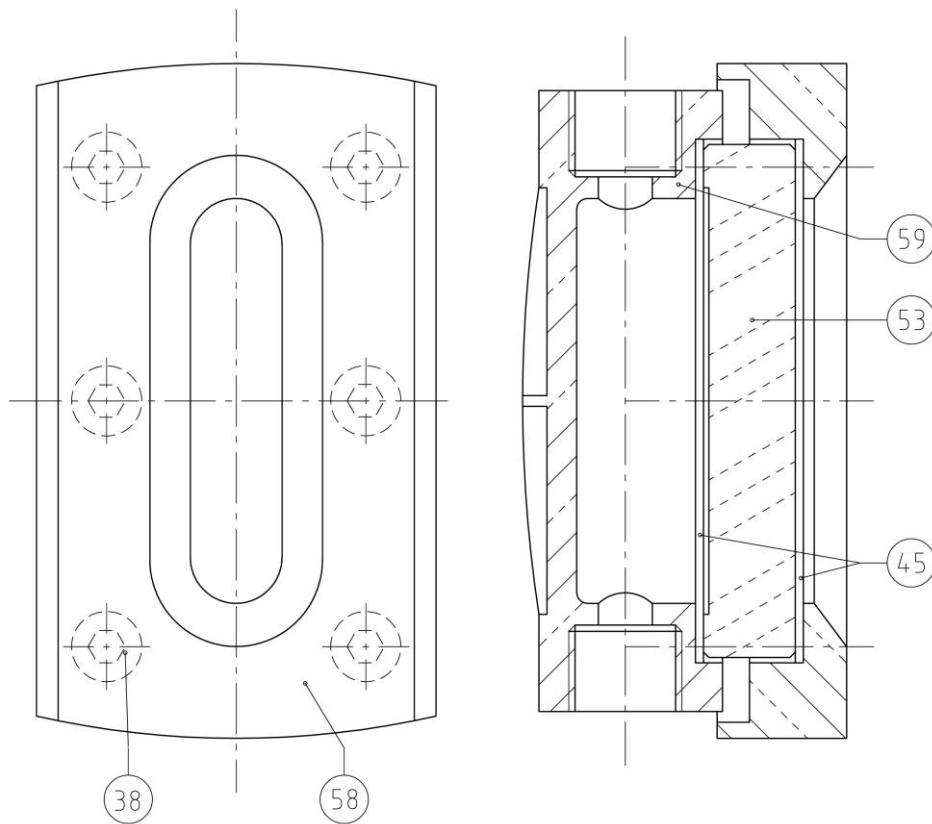

Ref. Document 0904DA145E version 01 of 03 February 2025

